


# acutix BATTERY EQUALIZER

## Installation Instructions

Installation is simple and straight forward:

- Slip the eyelet on the Blue wire over the bolt on the Negative (-) terminal and using a second nut (not supplied) tighten the eyelet between the two nuts.
- Slip the eyelet on the Red wire over the bolt on the Positive (+) terminal and using a second nut (not supplied) tighten the eyelet between the two nuts.
- Set the charger at 2.26 times the number of cells.

**Warning:** do not loosen or disconnect the existing bolted connections.

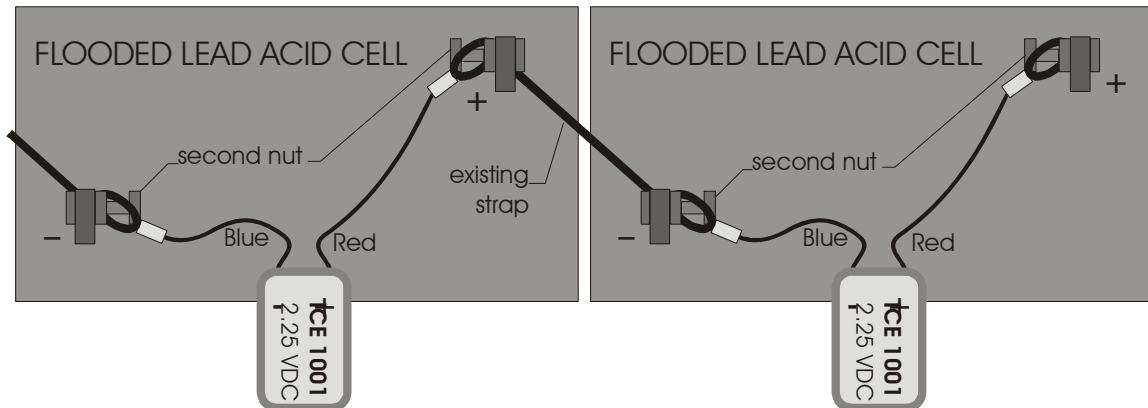

The **acutix** ICE 1001 works by bypassing any current that is not required by each cell. Approximately 50mA of extra current (over & above that required by the weakest cell) should bypass.

